



Congratulations on your purchase of a ProSelect® Empire Cage!

Assembly Instructions

Parts List:


- Ⓐ Side Walls (2)
- Ⓑ Back Wall (1)
- Ⓒ Hex Head Screws (12)
- Ⓓ Front Wall w/ Door (1)
- Ⓔ Floor Grate (1)

- Ⓕ Cage Top (1)
- Ⓖ Casters (4)
- Ⓗ Cage Bottom (1)
- Ⓘ Tray (1)


Tools Needed:

Hex Head Screwdriver (included)


1. Attach each Side Wall (A) to the Back Wall (B) using four Hex Head Screws (C). Narrow slot in each wall should be positioned at the bottom, and the tabs at the base of the Back Wall should be facing inward.

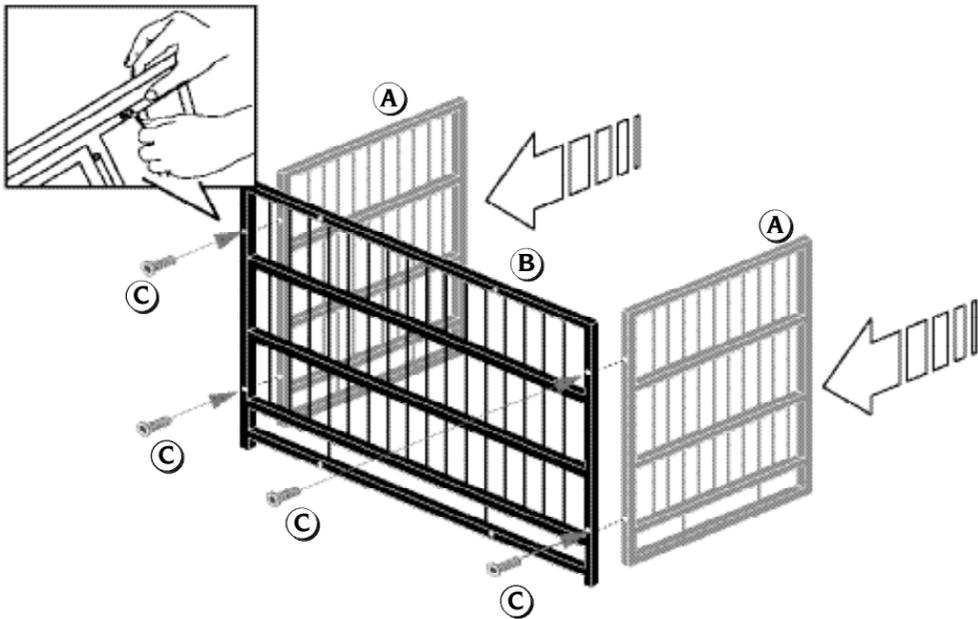


2. Attach Front Wall with door (D) to the Side Walls (A) with bottom tabs facing inward using four Hex Head Screws (C).

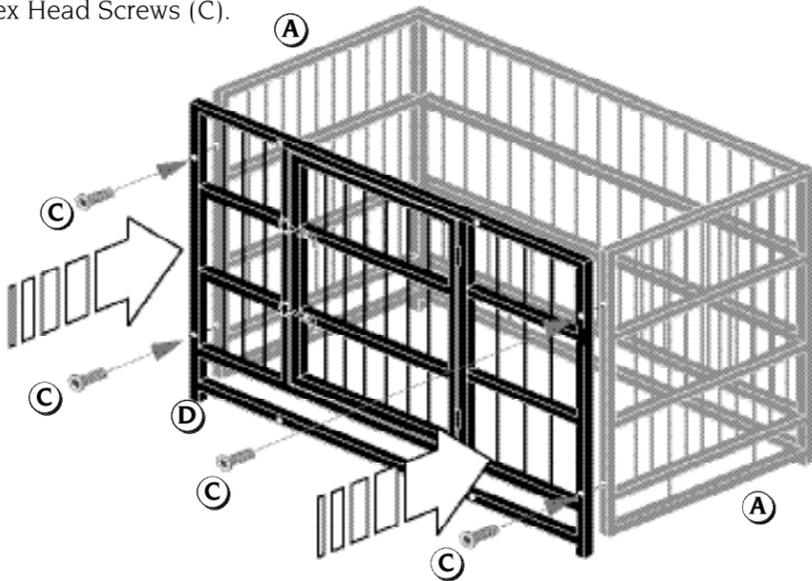


3. Install Floor Grate (E) by inserting it through the top opening of the cage. Position it so it rests on top of tabs inside the cage.

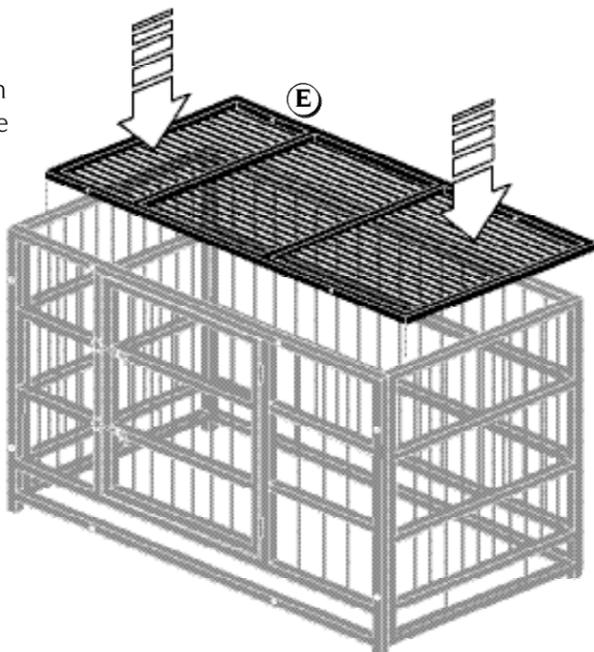


4. Attach Cage Top (F) using four Hex Head screws (C).

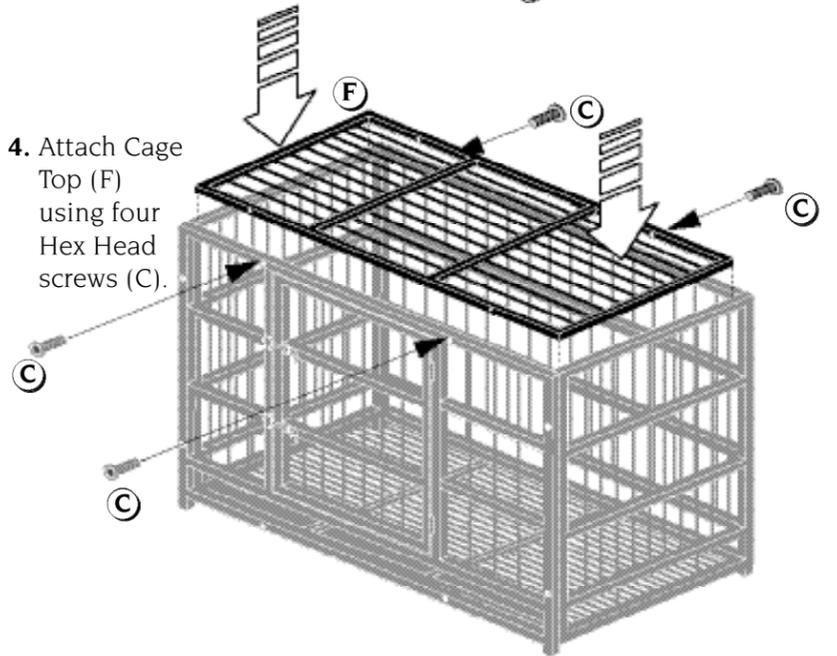

5. Screw Casters (G) into bottom corners of cage.

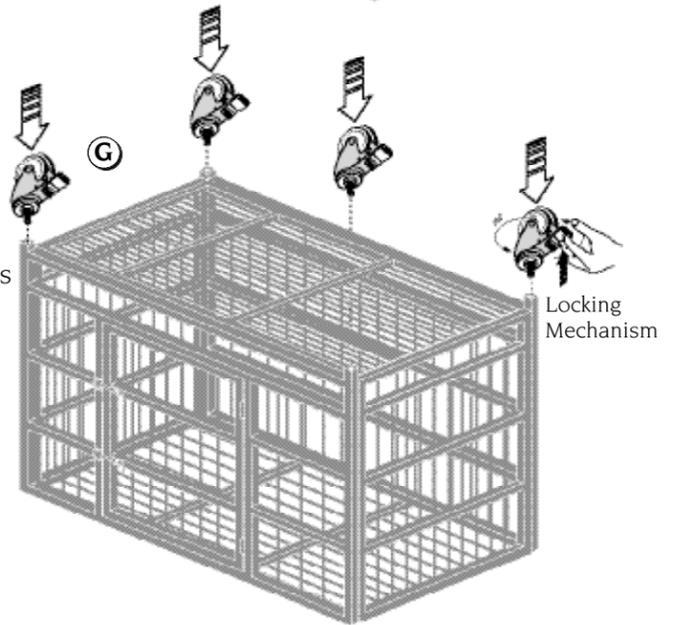

6. Slide the Cage Bottom (H) into place through the opening at the bottom of the Cage Front.

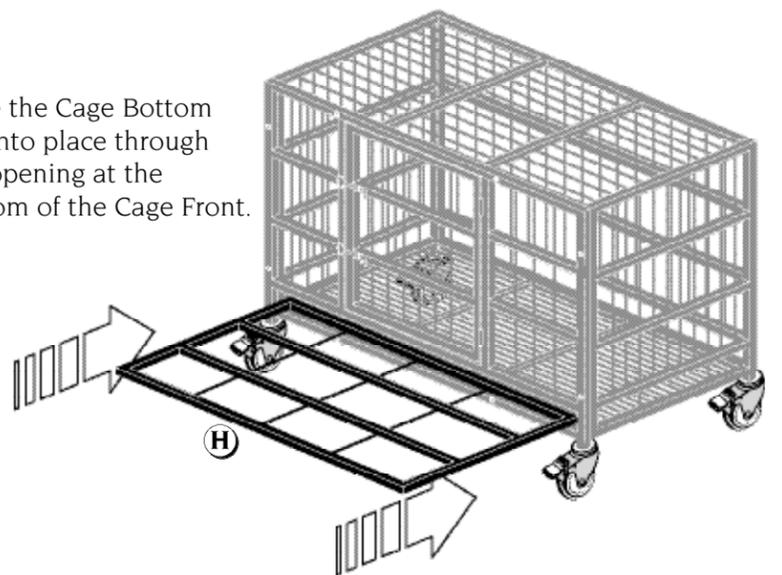

7. Slide Tray (I) into position on top of Cage Bottom through same opening.

